


THE GROUND HOG PARTS LIST AND OPERATING INSTRUCTIONS

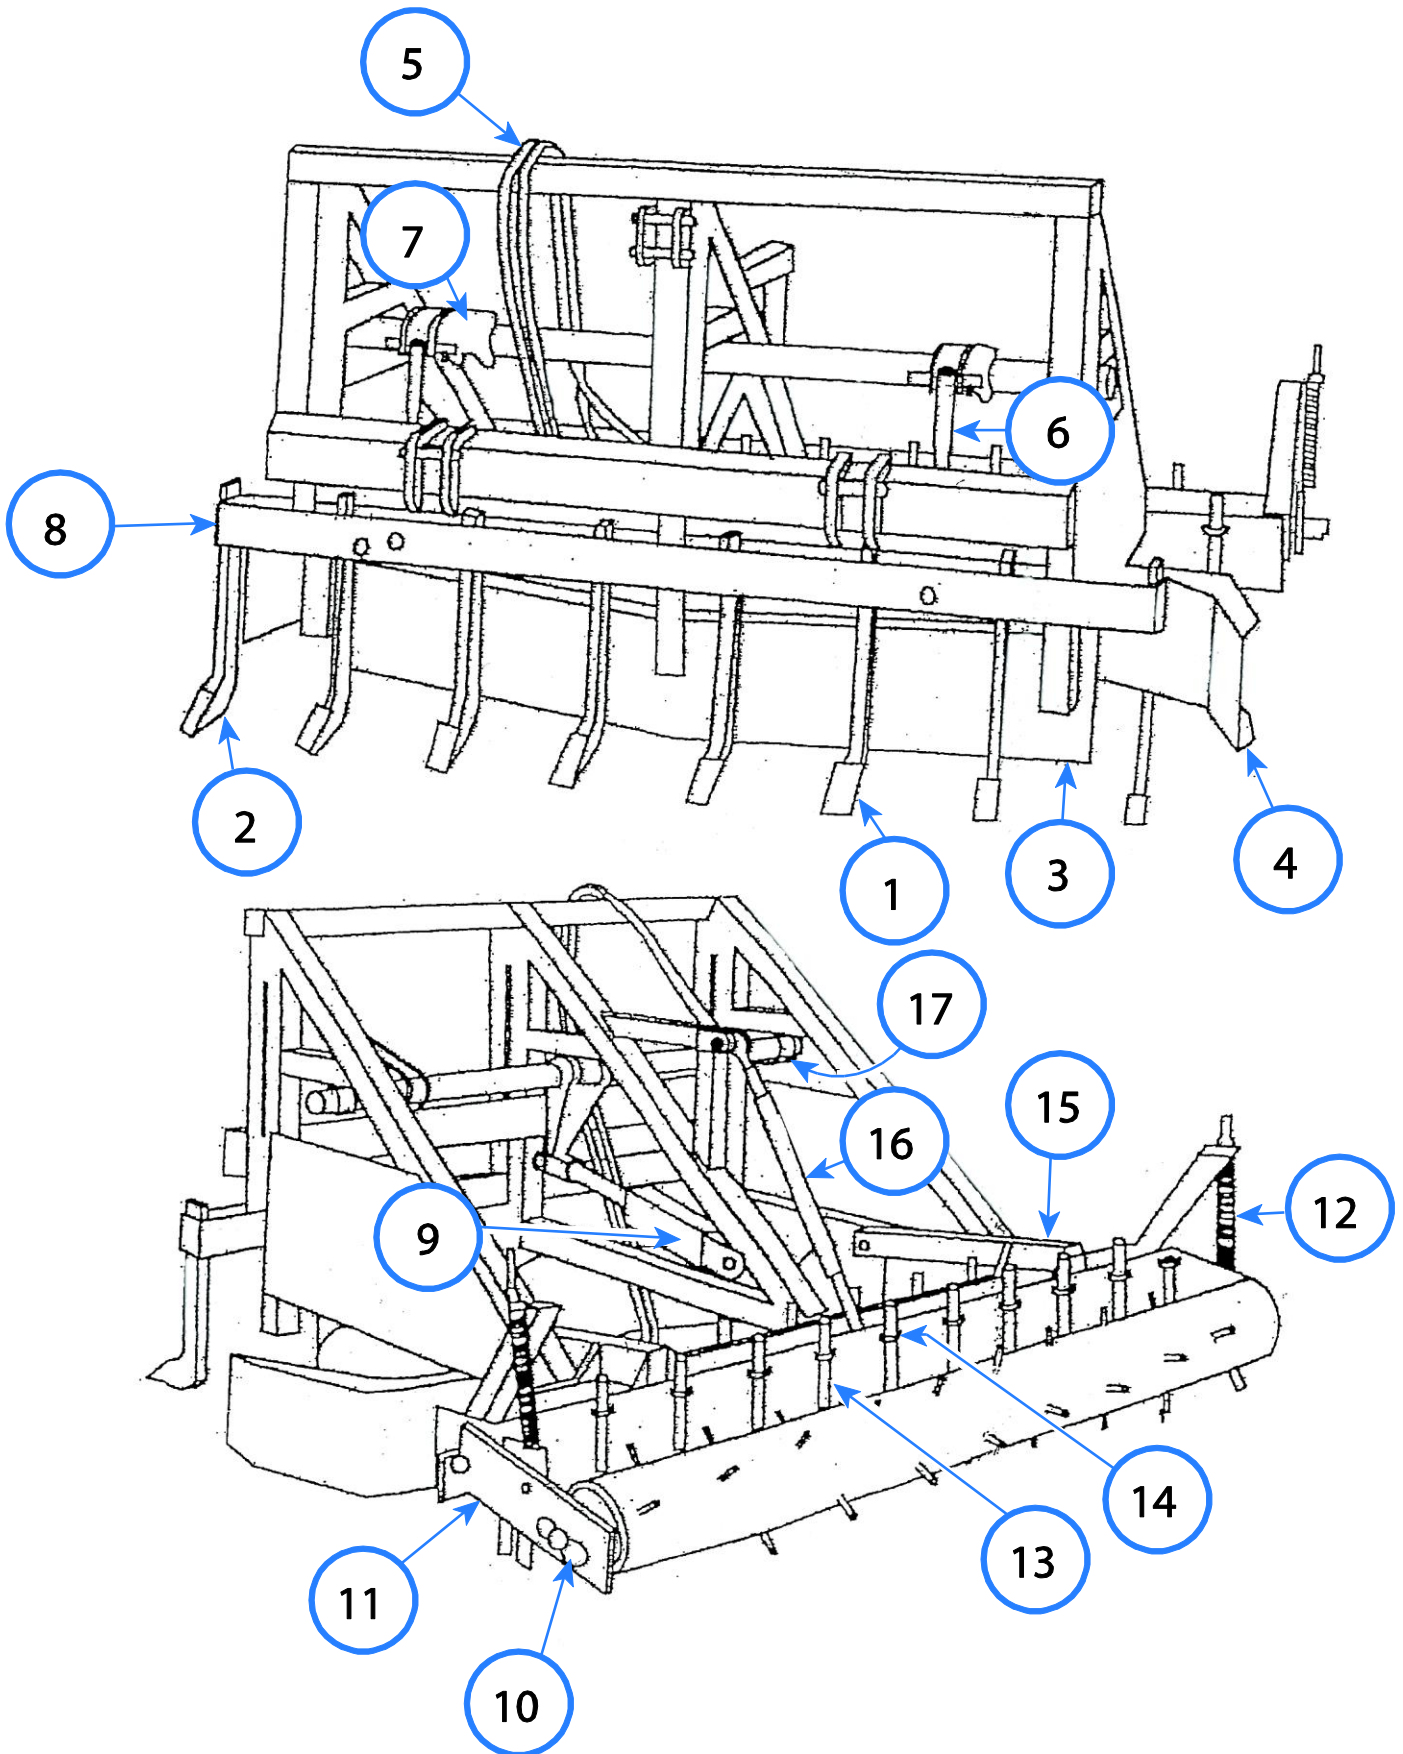



Lucas Metal Works
396281 West 3000 Road
Ochelata, OK 74051
918-535-2726/866-689-8904
LucasMetalWorks.com

Please Call For Pricing

PART#	DESCRIPTION:
1A	RIPPER POINT, HARD-SURFACED*
2	RIPPER SHANKS RIPPER SHANK W/ RIPPER POINT
3	FRONT BLADE
4	BACK BLADE
5	HYDRAULIC HOSE
6	RIPPER SHANK BAR ADJUSTERS
7	RIPPER SHANK BAR LEFT ARMS
8	RIPPER SHANK BAR
9	HYDRAULIC CYLINDER
10	BEARINGS, ROLLER, 5', 6', 7' & 8' MACHINE
10A	BEARINGS, ROLLER, 9' & 10' MACHINE
10B	BEARINGS, ROLLER, 12' MACHINE
11	ROLLER CONNECTING PLATE 5', 6', 7', 8'
11A	ROLLER CONNECTING PLATE 9'
11B	ROLLER CONNECTING PLATE 10', 12'
12	ROLLER SPRING ASSEMBLY 5', 6', 7', 8', 9'
13	I-BEAM SPIKES
14	U-BOLTS
15	I-BEAM & ROLLER SUPPORT ARMS
16	I-BEAM & ROLLER LIFT ARM
16A	I-BEAM & ROLLER RATCHET JACK
17	BUSHINGS, SHANK BAR LIFTING SHAFT

NOTE: FOR PROPER GRADING, ADJUST THE TOP-LINK ON THE TRACTOR TO ALLOW THE BACK BLADE (#4) TO BE 1.5" LOWER THAN THE FRONT BLADE (#3) WHEN THE MACHINE IS SUSPENDED ABOUT 6" ABOVE THE GROUND.

WHEN WORKING THE ARENA, THE I-BEAM/ROLLER SUPPORT ARMS (#15) SHOULD BE RESTING ON THE BACK BLADE (#4).

10, 10A, 10B & 17 **SHOULD BE GREASED EVERY 10 HOURS OF USE.**

* HARD SURFACING WILL APPROXIMATELY DOUBLE THE RIPPER POINT LIFE.

CAUTION: **DO NOT** OPERATE MACHINE WITHOUT RIPPER POINTS ON SHANKS.